# **Reverie<sup>®</sup> EZ-Lift<sup>™</sup> Flat Foundation**

## (PATENTED, SEE WWW.REVERIE.COM/PATENTS)

## **Frame Assembly Instructions**



The height of the EZ-Lift<sup>™</sup> Flat Foundation can be adjusted to either 9" or 5" in height.

### **PACKAGE CONTENTS**

- Flat Foundation
- Foundation Cover
- Allen Key Wrench & Spare Parts

## SAFETY PRECAUTIONS

#### IMPORTANT UNPACKING INSTRUCTIONS

## To avoid damage to the foundation, always open the carton while the foundation is laying **FLAT** on the floor.

#### SMALL CHILDREN AND PETS WARNING:

After your foundation has been unboxed, immediately dispose of packaging as it can smother small children and pets. To avoid injury, children and pets should not be allowed to play on or under the foundation.

#### SAVE THESE INSTRUCTIONS:

Your foundation has been designed to provide you with the reliable operation and durability you expect. This product has been inspected prior to shipment.

#### WARNING: PINCH POINTS Keep hands clear

#### WARRANTY

Your foundation comes with a 5 Year Limited Warranty. For full warranty information, please visit our website at: https://reverie.com/support

#### **Register Online**

For easy registration of your warranty visit: https://reverie.com/register-your-warranty Please prepare a digital copy of your proof of purchase (invoice or sales receipt) when registering online. You may be required to provide the Serial Number for registration.

Manufactured by Reverie® For Warranty and Service:

flatfoundation@reverie.com Include your foundation product code and serial number, and attach your purchase receipt.

## STEP 1

Carefully pull the folded foundation out of the shipping carton then remove and discard the plastic bag. Unfold the foundation to flat, keeping the unit top side down. For safety reasons, this should be performed by **2 people.** 


This foundation has a default out-of-box height of 9". To convert to 5", skip to the "For 5" Height Setup" section before completing Steps 2 and 3. If not, proceed to the next step.

> WARNING: PINCH POINTS KEEP HANDS CLEAR

WARNING: PACKAGING MATERIAL MAY SMOTHER SMALL CHILDREN AND PETS

## STEP 2

Carefully flip the foundation over with 2 people, to the topside-up position. Make sure the foundation is fully unfolded and stable on the floor. Secure the four reinforcement linkages located on the inner side of the foot and head ends of the foundation by hooking them onto the corresponding studs on the bottom frame. The inner stud is for the 9" height, the outer stud is for the 5" height.

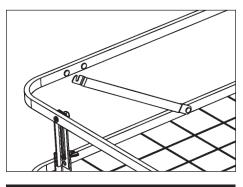

## STEP 3


Unpack the stretch-fit cover and put it onto the foundation. Do so by aligning all four corners of the cover underneath the foundation, then pull each corner all the way around the bottom frame. Your setup is now complete.

## \* FOR 5" HEIGHT SETUP ONLY

## STEP 1.1\*

To convert the profile height to 5", first make sure that the foundation is upside down. On each vertical support (15 total), *loosen* each Wing Nut & Bolt set (A, 18 total) with the Allen Key Wrench (DO NOT remove them). Then, disassemble each Clevis Pin set (B) below each support slot. Now, **carefully** lower the entire frame down to 5", **with 2 people**.




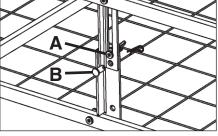

## STEP 1.2\*

Two holes should now be aligned on the *bottom* of each support slot. Reinstall the Clevis Pin sets (B) into these holes on each vertical support. Then, retighten each Wing Nut & Bolt set (A) with the Allen Key Wrench.

WARNING: DO NOT INSTALL THE CLEVIS PIN SETS (B) INTO THE TOP HOLES (C) FOR THE 5" SETUP.

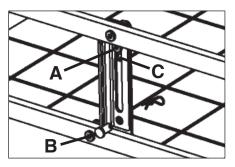

STEP 1.3\*

To finish the foundation setup, go back to Steps 2 & 3.