
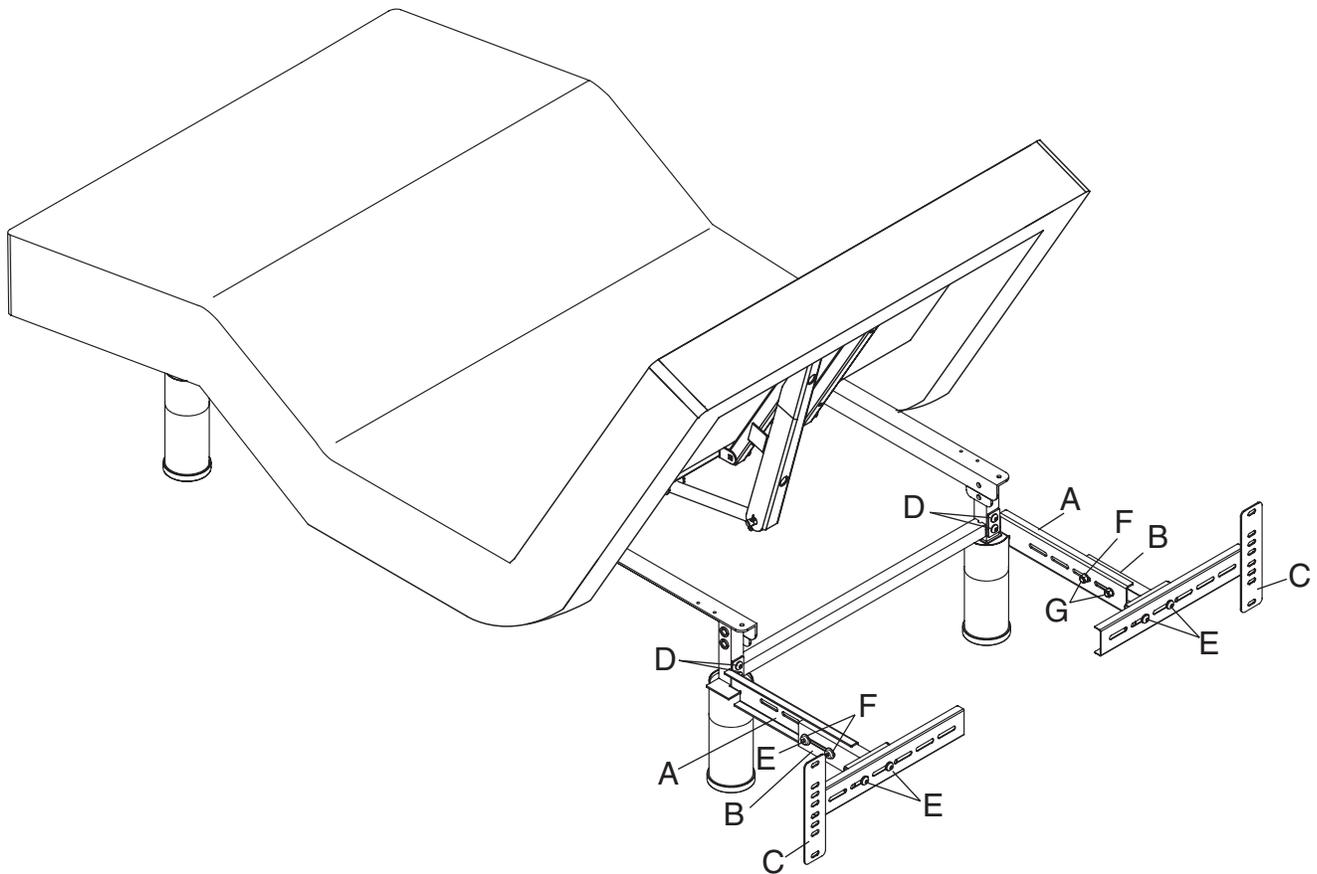


## Optional Parts List for Headboard Bracket Installation

### PARTS LIST

- A. Leg Clamp Bracket (2)
- B. Inner Headboard Bracket (2)
- C. Outer Headboard Bracket (2)
- D. 45 L Bracket Bolt (4)
- E. 40 L Bracket Bolt (8)
- F. 5 / 16 Inch Washer (16)
- G. 5 / 16 Inch Locking Nut (12)
- H. Allen Key (1)
- I. Wrench (1)

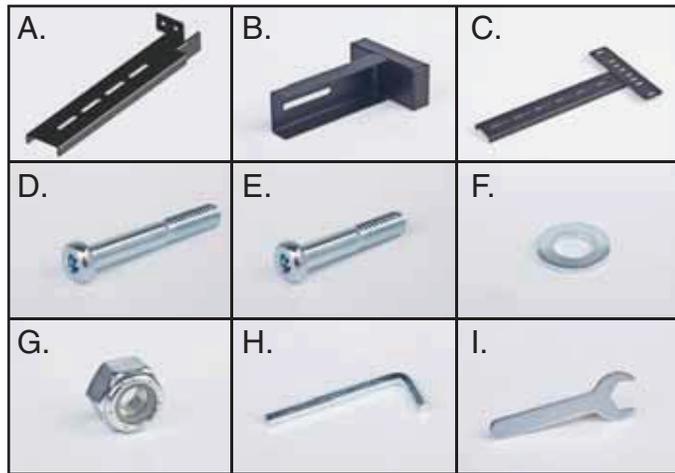





**CUSTOMER SERVICE: 800-973-8374**  
 CUSTOMERSERVICE@REVERIE.COM

## Headboard Bracket Installation



### STEP 1

Install the headboard brackets to the power base. Place one bracket on the left-hand side of the base and one bracket on the right-hand side of the base.

1. Use the hand control to raise the head of the base in order to gain access to the power base.
2. Bolt the Leg Clamp Bracket (A) to the leg using the headboard bracket bolts (D), and the 5/16" lock nut (G).
3. Bolt the inner Headboard Bracket (B) to the Leg Clamp Bracket (A) using the Headboard Bracket Bolts (E), the 5/16" washer (F), and the 5/16" lock nut (G).
4. Place the open side of the outer headboard bracket (C) onto the exposed square tube of the inner head board bracket (B). This will create a tight fit between (B) and (C). Place a Headboard Bracket Bolt (E) with a 5/16 Inch Washer (F) through the Outer Headboard Bracket (C) and into the Inner Headboard Bracket (B). Use a 5/16 Inch Washer (F) and 5/16 Inch Locking Nut (G) and hand tighten to allow for adjustment. Repeat same procedure for opposing side of the power base.

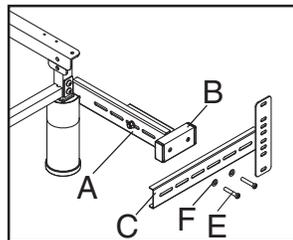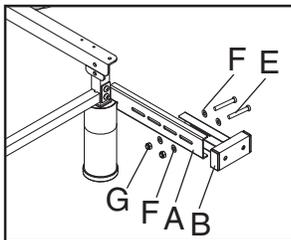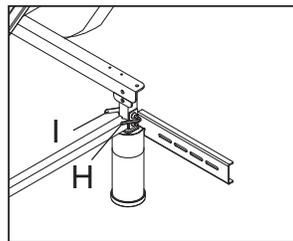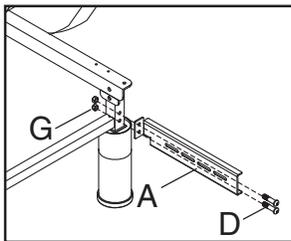

5. Ensure the headboard bracket is assembled a distance of 1.5 (38.1 mm) to 2 inches (50.8 mm) between the edge of the power base and the headboard bracket assemblies.
6. Firmly tighten the headboard bolts (not included) to the end of the headboard bracket assembly.

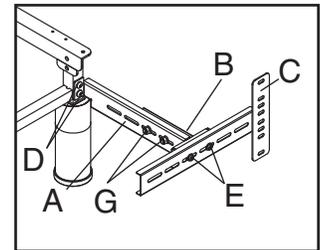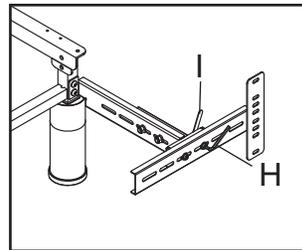

7. Measure the distance of the center to center mounting holes in the headboard.
8. Measure the distance of the center to center mounting holes in the headboard bracket assemblies.
9. If the headboard brackets require adjustments, loosen the bolts that are holding the outer headboard brackets and move them to the necessary distance. Reinstall the bolts and firmly tighten.

### STEP 2

Place your mattress on top of your power base.

Typical **Reverie 4M™ Power Base** is **Headboard installation** now complete. If the base is equipped with a programmable setting or options, refer to the Hand Control Guide for more information.

**CUSTOMER SERVICE: 800-973-8374**  
[CUSTOMERSERVICE@REVERIE.COM](mailto:CUSTOMERSERVICE@REVERIE.COM)